



PRESSURE TANK

TROUBLESHOOTING GUIDE

TRANSLATION OF THE ORIGINAL MANUAL

IMPORTANT : Before assembly and start-up, please read and clearly understand all the documents relating to the equipment (professional use only).

THE PICTURES AND DRAWINGS ARE NOT CONTRACTUAL. WE RESERVE THE RIGHT TO MAKE CHANGES WITHOUT PRIOR NOTICE.

KREMLIN - REXSON

150, avenue de Stalingrad

93 245 - STAINS CEDEX – France

☎ : 33 (0)1 49 40 25 25 **Fax** : 33 (0)1 48 26 07 16

www.kremlin-rexson.com



WARNING :

Before operating on the tank, be sure that the pressure has been evacuated. Shut off the compressed air supply and depressurize the system by unscrewing completely the safety valve.

**The pressure tank is manufactured under the ATEX and the Pressure Equipment agreements and can not be modified.
KREMLIN REXSON will not be held responsible for any failure to comply with that instruction.**

**Guards (air motor cover, coupling shields, housings ...) have been designed for safe use of the equipment.
The manufacturer will not be held responsible for bodily injury or failure and / or damage to property due to removal or partial removal of the guards**

TROUBLE	SOLUTION
Material does not come out from the spray gun nozzle	Check the tank air supply.
	Increase the air pressure inside the tank (screw the air regulator - pantone 382 colour).
	Be sure that the suction strainer is not clogged. Clean it if it is necessary.
Excessive material at the spray gun nozzle	Decrease the pressure inside the tank (unscrew the air regulator - pantone 382 colour).
	If the pressure is too low, install a smaller nozzle.
Troubles with the agitator	Refer to agitator instruction manual.
Spraying trouble	Refer to spray gun instruction manual.

Before reassembling the different components :

- Clean the parts with the appropriate cleaning solvent.
- Install new seals if it is necessary after having lubricated them with PTFE grease.
- Install new parts if it is necessary.